


Standfast® Surplus Valve

65mm and above

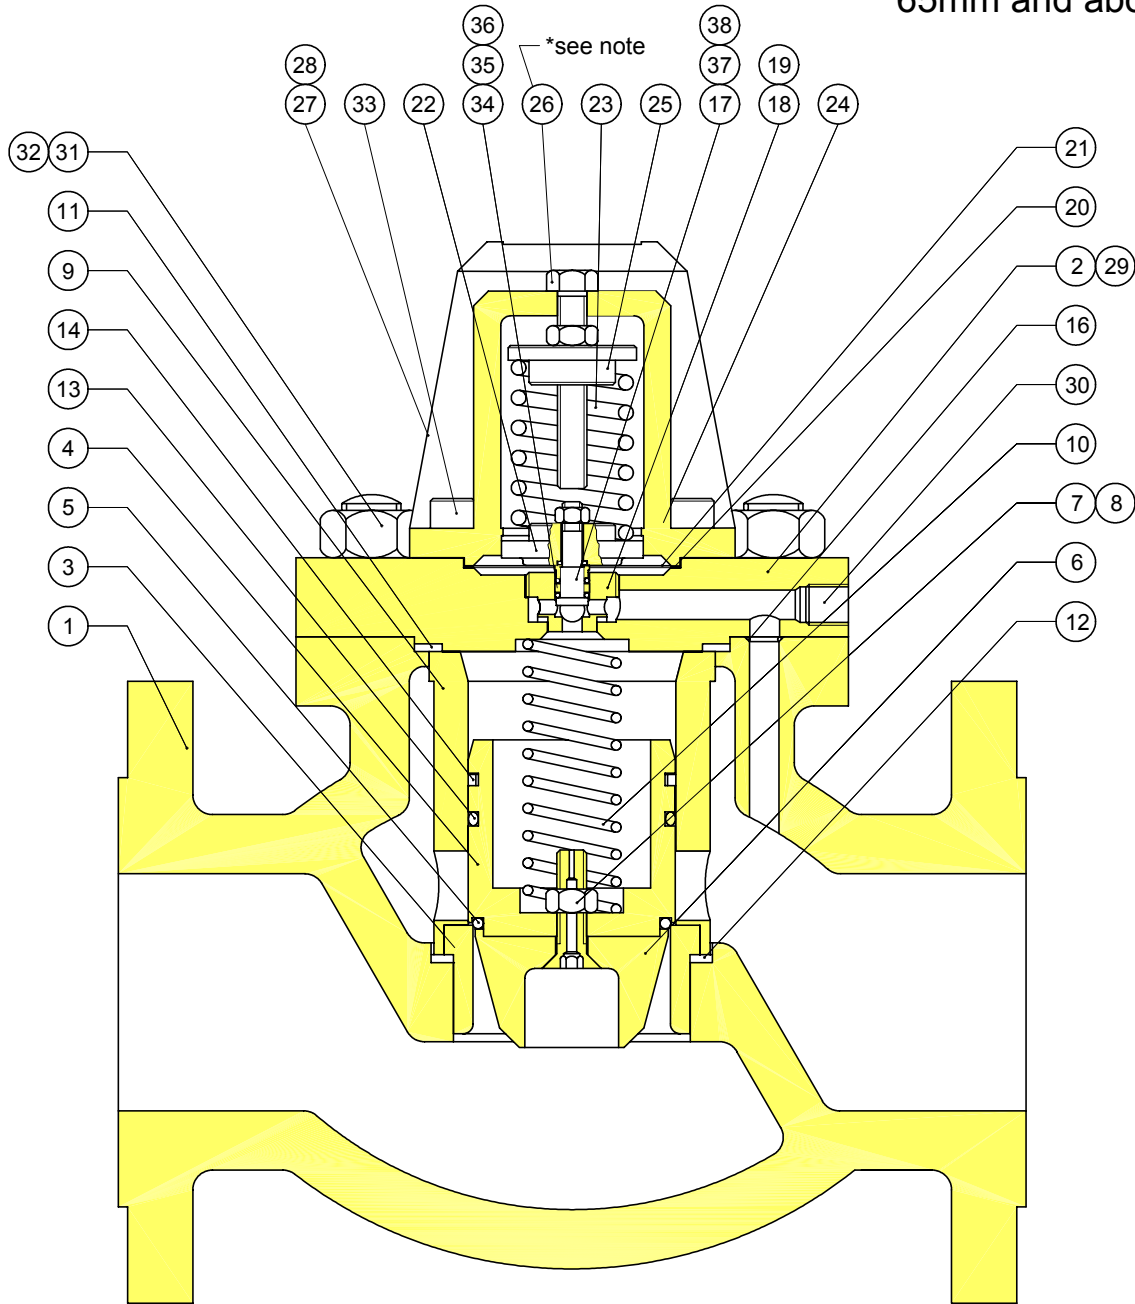

- | | | |
|-----------------|----------------------|-------------------------|
| 1 Chest | 14 Piston ring | 28 Locking screw |
| 2 Cover | 16 Port seal | 29 Remote coupling |
| 3 Seat | 17 PV plug | 30 Blanking plug |
| 4 Piston body | 18 PV seat | 31 Cover stud |
| 5 Soft face | 19 Seat sealing ring | 32 Cover nut |
| 6 Piston cap | 20 Diaphragm | 33 Yoke bolt |
| 7 Hollow screw | 21 Diaphragm gasket | 34 Lower retaining ring |
| 8 Locknut | 22 PV piston | 35 Upper retaining ring |
| 9 Guide tube | 23 PV spring | 36 Plug seal |
| 10 MV spring | 24 Yoke | 37 PV piston seal |
| 11 Cover gasket | 25 PV spring cap | 38 Ball |
| 12 Seat gasket | 26 Adjusting screw | |
| 13 Piston seal | 27 Bonnet | |

* Adjust the nut on top of spring cap – not the adjusting screw head.

