


Standfast® Reducing Valve

65mm and above

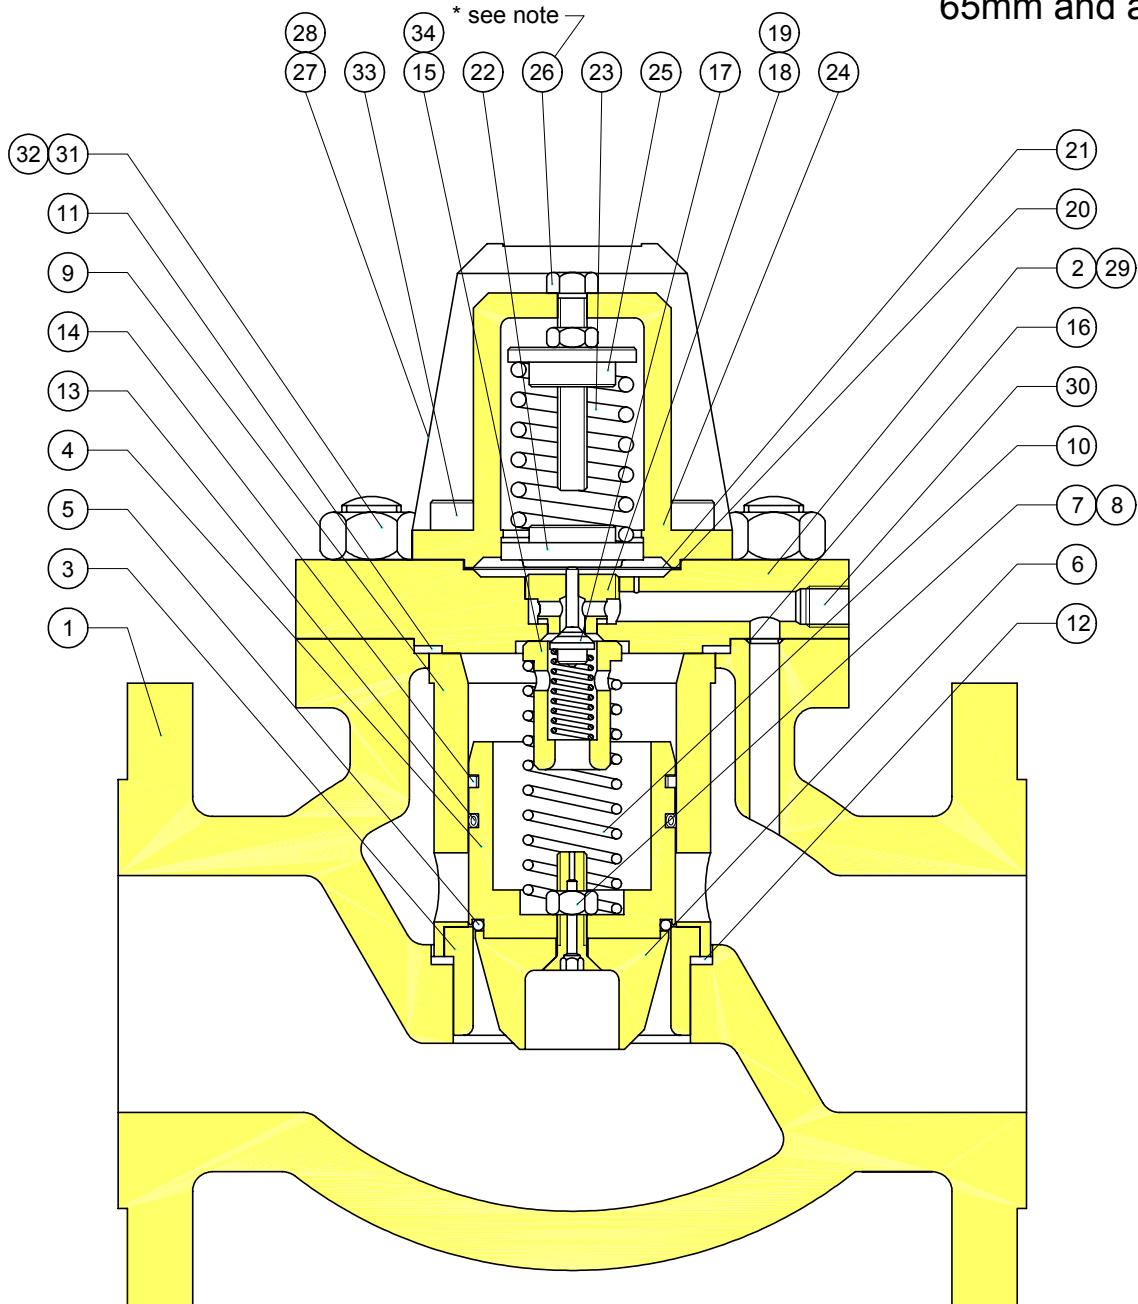

- | | | |
|-----------------|----------------------|----------------------|
| 1 Chest | 13 Piston seal | 25 PV spring cap |
| 2 Cover | 14 Piston ring | 26 Adjusting screw |
| 3 Seat | 15 MV spring cap | 27 Bonnet |
| 4 Piston body | 16 Port seal | 28 Locking screw |
| 5 Soft face | 17 PV plug | 29 Remote plug |
| 6 Piston cap | 18 PV seat | 30 Blanking plug |
| 7 Hollow screw | 19 Seat sealing ring | 31 Cover stud |
| 8 Locknut | 20 Diaphragm | 32 Cover nut |
| 9 Guide tube | 21 Diaphragm gasket | 33 Yoke bolt |
| 10 MV spring | 22 PV piston | 34 Decoupling spring |
| 11 Cover gasket | 23 PV spring | |
| 12 Seat gasket | 24 Yoke | |

* Adjust the nut on top of spring cap – not the adjusting screw head.

