


Standfast® Reducing Valve

up to 50mm

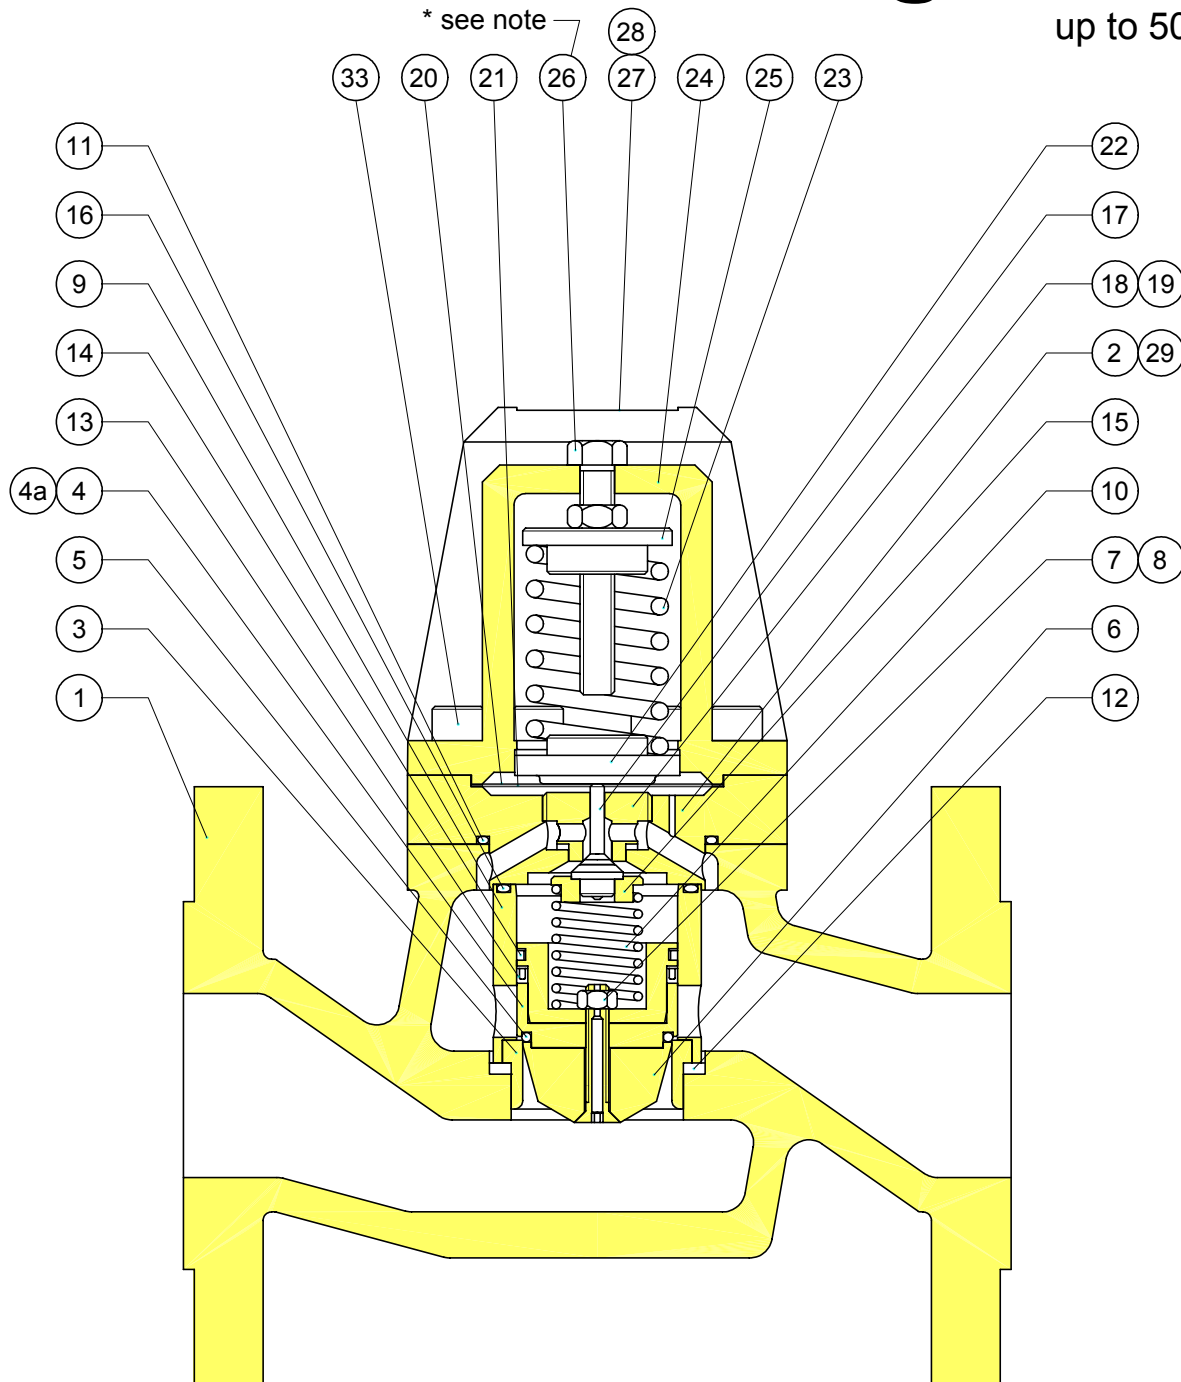

- | | | |
|------------------|---------------------------------|--------------------|
| 1 Chest | 11 Cover seal | 22 PV piston |
| 2 Cover | 12 Seat gasket | 23 PV spring |
| 3 Seat | 13 Piston seal | 24 Yoke |
| 4 Piston body | 14 Piston ring | 25 PV spring cap |
| 4a Piston insert | 15 MV spring cap (40-50mm only) | 26 Adjusting screw |
| 5 Soft face | 16 Guide tube seal | 27 Bonnet |
| 6 Piston cap | 17 PV plug | 28 Locking screw |
| 7 Hollow screw | 18 PV seat | 29 Remote plug |
| 8 Locknut | 19 Seat sealing ring | 33 Yoke bolt |
| 9 Guide tube | 20 Diaphragm | |
| 10 MV spring | 21 Diaphragm gasket | |

* Adjust the nut on top of spring cap – not the adjusting screw head.

