


Standfast® Surplus Valve

up to 50mm

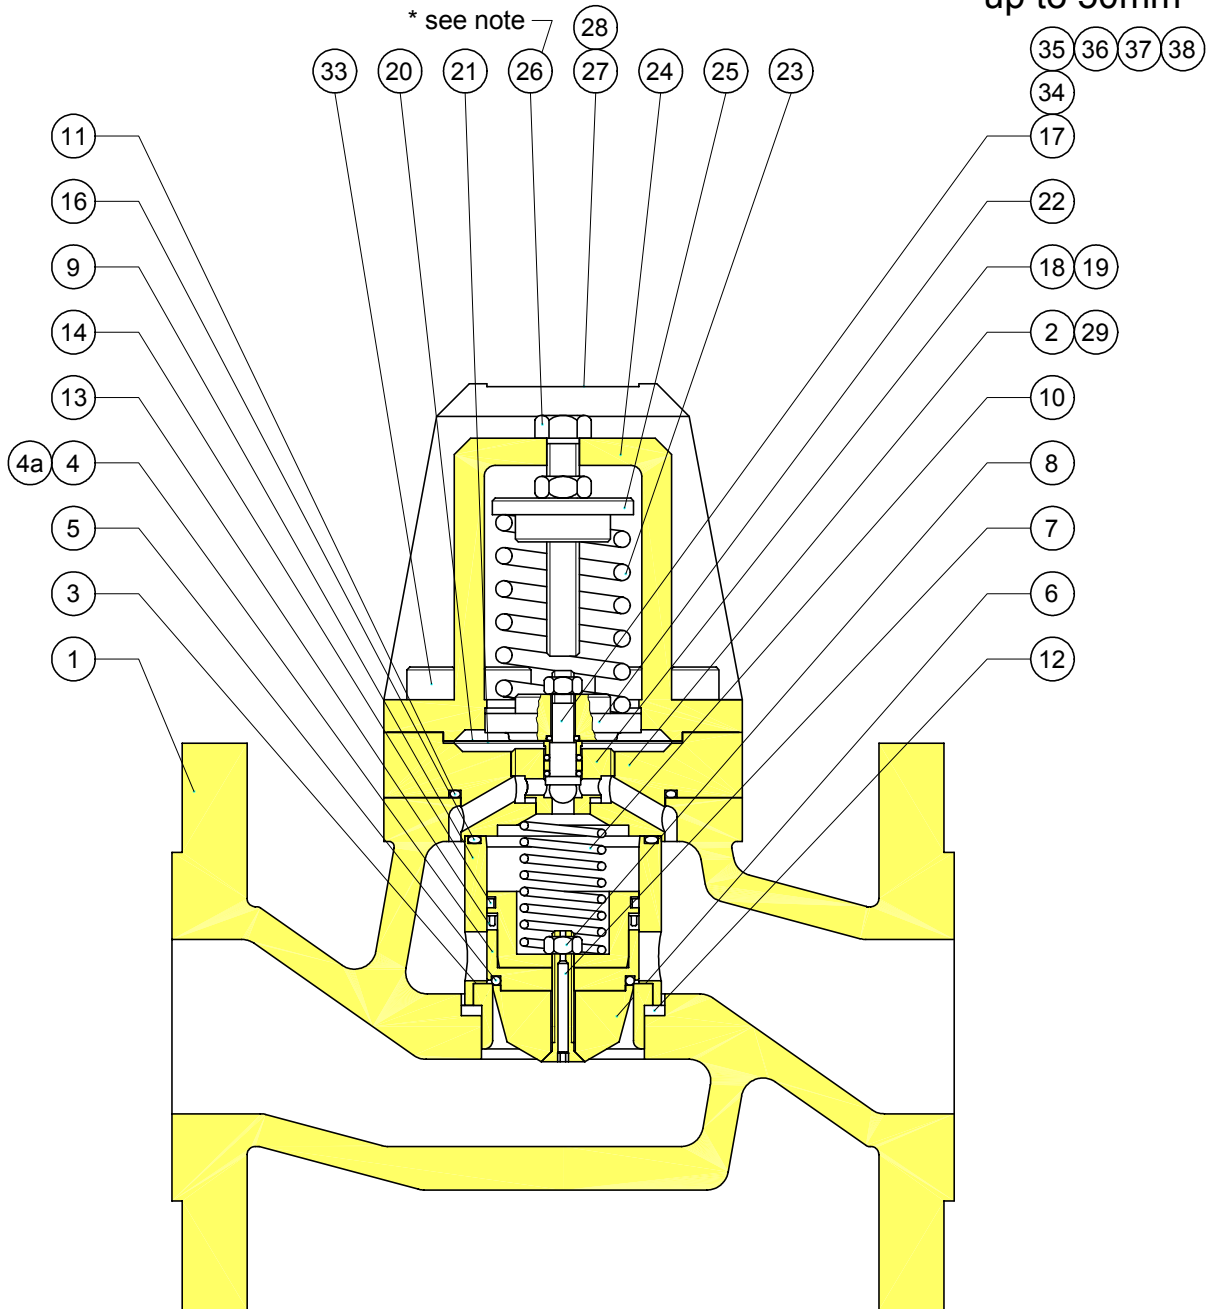

- | | | |
|------------------|----------------------|-------------------------|
| 1 Chest | 12 Seat gasket | 25 PV spring cap |
| 2 Cover | 13 Piston seal | 26 Adjusting screw |
| 3 Seat | 14 Piston ring | 27 Bonnet |
| 4 Piston body | 16 Guide tube seal | 28 Locking screw |
| 4a Piston insert | 17 PV plug | 29 Remote coupling |
| 5 Soft face | 18 PV seat | 33 Yoke bolt |
| 6 Piston cap | 19 Seat sealing ring | 34 Lower retaining ring |
| 7 Hollow screw | 20 Diaphragm | 35 Upper retaining ring |
| 8 Locknut | 21 Diaphragm gasket | 36 Plug seal |
| 9 Guide tube | 22 PV piston | 37 PV piston seal |
| 10 MV spring | 23 PV spring | 38 Ball |
| 11 Cover seal | 24 Yoke | |

* Adjust the nut on top of spring cap – not the adjusting screw head.

